 


IUXF-LATCH Wall

8-12mm gate panel







BACK - Inside pool area

Installation

1. Loosen the M5 x 16 screws enough so the front plate and back plate are detached. For a 10mm gate add 2 pc's of 1mm plastic on the back plate. 8mm gate add 4 pc's 2. Place the front plate and back plate over the gate panel. Align the side edge with the gate then tighten the M5 \times 16 screws.

FRONT - Outside pool area



3. Hold the wall catch aligned with the front plate and mark position. Open gate and screw the wall catch to the wall. Check the glass panel gap is 6-8mm.



