


## Matt White Glass Shower Screen Offset Wall Bracket

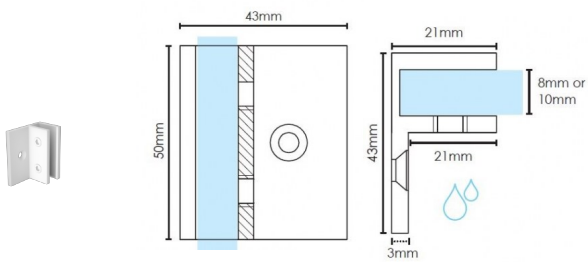

Used to fix Hinge and Return/Fixed panels to the wall in a shower screen.

3 Per Panel recommended

These are easier to install than the hidden screw wall bracket. The screw can be marked and installed with the glass standing in place.

- Offset Wall Bracket for Shower Screens
- Matt White Finish
- 3mm Gap between glass and wall
- Square Finish Edges
- Suitable for 8mm & 10mm Glass
- 2 x Compression/Friction screws
- No holes in glass required
- Made from solid brass
- 1 x Fixing screw and Clear Gaskets Provided

## Shower Screen Offset Wall Bracket Matt White

---

Silicon must be used along glass edge when friction brackets used.

Some people also use these along the floor however we do not recommend this as the screw will break the waterproofing membrane, the whole glass weight will be positioned on the bracket rather than spread across the length of the sheet and the glass will be held 3mm off the floor.

Rating: Not Rated Yet

**Price**  
\$ 17.00

\$ 1.55

[Ask a question about this product](#)

### Description

Used to fix Hinge and Return/Fixed panels to the wall in a shower screen.

3 Per Panel recommended

These are easier to install than the hidden screw wall bracket. The screw can be marked and installed with the glass standing in place.

- Offset Wall Bracket for Shower Screens
- Matt White Finish
- 3mm Gap between glass and wall
- Square Finish Edges
- Suitable for 8mm & 10mm Glass
- 2 x Compression/Friction screws
- No holes in glass required
- Made from solid brass
- 1 x Fixing screw and Clear Gaskets Provided

Silicon must be used along glass edge when friction brackets used.

Some people also use these along the floor however we do not recommend this as the screw will break the waterproofing membrane, the whole glass weight will be positioned on the bracket rather than spread across the length of the sheet and the glass will be held 3mm off the floor.

///