
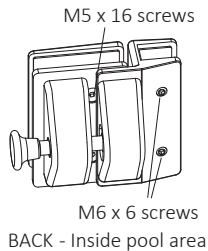


LUXE-LATCH 180

8-12mm gate & 12mm catch panel

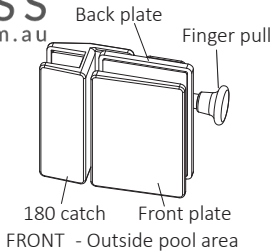

Installation

1. Loosen the M5 x 16 screws enough so the front plate and back plate are detached. For a 10mm gate add 2 pc's of 1mm plastic on the back plate. 8mm gate add 4 pc's

2. Place the front plate and back plate over the gate panel. Align the side edge with the gate then tighten the M5 x 16 screws.

3. Put the 180 catch fully over the catch panel and align it with the front plate then tighten the M6 screws. Check the glass panel gap is 8-10mm.

