




LUXE-LATCH 90 Internal

8-12mm gate & 12mm catch panel


Accessories



1mm plastic 4pc`s

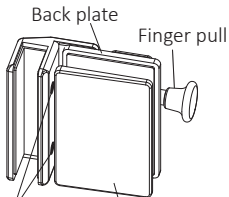

M6 x 6 screws Front plate
FRONT - Outside pool area

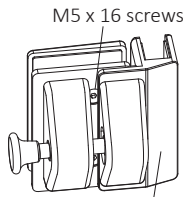

BACK - Inside pool area

Installation

1. Loosen the M5 x 16 screws enough so the front plate and back plate are detached. For a 10mm gate add 2 pc`s of 1mm plastic on the back plate. 8mm gate add 4 pc`s

2. Place the front plate and back plate over the gate panel. Align the side edge with the gate then tighten the M5 x 16 screws.

3. Put the 90 catch over the catch panel and align it with the front plate. Then tighten the M6 screws, they must not protrude. Make sure the glass panel gap is 8-10mm.

